



Program Fan Assembly

- 1 Each fan requires 2 cards, front and back, a wooden handle and 6 glue dots. Find a clean surface to work on.



- 2 Remove the protective backer from three glue dots and center on the top section of one side of the handle. Press lightly and carefully remove glue dots from the clear backer, so they adhere to the handle.



- 3 Take card front. With the design facing up, center it over the handle. Press down firmly to secure it to the glue dots.



- 4 Flip the fan over so that the design side is facing down and the back of the wooden stick is facing up.



- 5 Repeat step 2 to adhere the remaining glue dots to the back of the handle.



- 6 Take the card back and center it over the card front, aligning the edges. Press down to adhere the card back to the glue dots.

