



Program Fan Assembly

1 Each fan requires 2 cards, front and back, a wooden handle and two adhesive strips. Find a clean surface to work on.



2 Remove backer from one adhesive strip. Center strip on the upper section of the handle. Press down lightly and carefully remove the remaining backer so the adhesive strip adheres to the handle.



3 Take card front. With the design facing up, center it over the handle. Press down firmly to secure it to the adhesive strips.



4 Flip the fan over so that the design side is facing down and the back of the handle is facing up.



5 Repeat step 2 to adhere the remaining adhesive strip to the handle.



6 Take the card back and center it over the card front, aligning the edges. Press down to adhere the card back to the adhesive strip.

