


Serene Forest Christmas Card Assembly

- 1 Lay the wrap out on a clean, flat surface so the front of the card faces down. (The bottom panel – the side that will hold the insert – will be on your right.) Center the printed card on the left panel and attach it to the wrap with four glue dots.

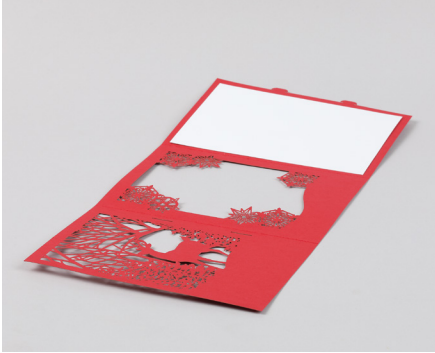

- 2 Fold the left panel (it features the deer standing in the woods) over the center panel (the center panel features die-cut snowflakes) as shown.



- 3 Next, keeping the die-cut panels together, fold them over the card back so the printing appears behind the deer. Do not insert the tabs into the slots located on the



- 4 Slide the card into its envelope, folded-edge first, being careful to prevent the cutout designs from catching on the edge of the envelope.



- 5 **Preparing the card for display.** After recipients open the card and read the greeting they can create a free-standing card with a layered look.

Flip the card over and fold down the tabs on the back of the card.



- 6 Insert the tabs into the slots found on the center layer of the card.

