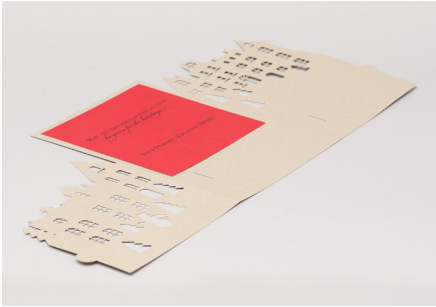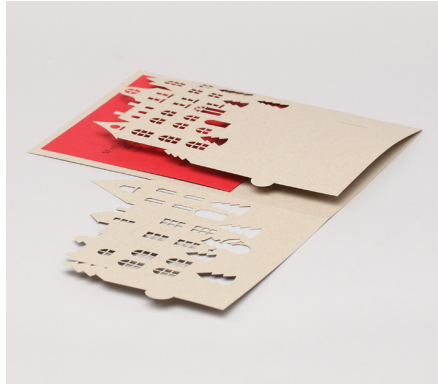# CARLSON CRAFT®

City Greetings Holiday Card Assembly

1 Lay the wrap out on a clean, flat surface so the front of the card faces down. (The top layer – the side featuring the snowman – will be on your left.) Center the printed card near the top of the center panel of the wrap, being careful to place it above the slot. Attach to the wrap with four glue dots.

2 Fold the middle die-cut layer (the right-hand panel) over the center panel of the card. Do not insert the tab into the slot, as this will create a bowed effect that will prevent the card from fitting into the envelope.

3 Next, fold the top die-cut layer (the left-hand panel) over the first two panels. Do not insert the tab into the slot.

4 Slide the card into its envelope, folded-edge first, being careful to prevent the cutout designs from catching on the edge of the envelope.

5 **Preparing the card for display.** After recipients open the card and read the greeting, they can refold it, sliding each tab into its slot to create a free-standing card.

Slide the tab of the middle layer into the slot cut into the center panel of the wrap. The middle layer will bow slightly, creating a three-dimensional look.

6 Slide the tab on the top layer into the slot on the middle panel to complete the assembly.