


Wedding Gown Favor Box Assembly

- 1 Open the box to form a rectangle.

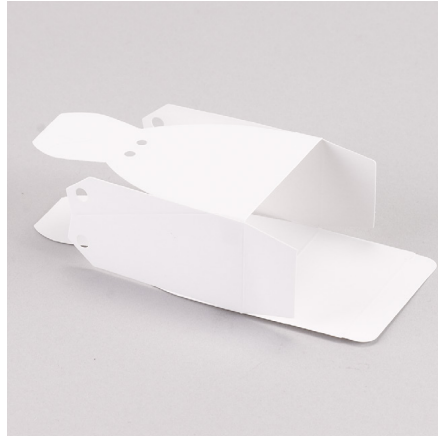

- 2 Pinch sides of box together to create the diagonal scored lines on the sides.



- 3 Fold down scored tabs and tuck into the bottom of box. Fold the large bottom flap over.



- 4 Once bottom flaps are tucked in, proceed to gather the included ribbon and stand box up.



- 5 Line up the pre-punched holes with the holes on the front and back of the box. TIP: Use a bobby pin or large needle to make threading ribbon easier.



- 6 Loosely thread the pre-cut ribbon through the holes from the front to the back, then from the back to the front.



- 7 The result is the two ribbon ends will be on the front of the box with the personalization.



- 8 Carefully pull ribbons tight while pressing back, sides and front together to close box.



- 9 Tie the ribbon in a bow to complete favor box.
You're done!

